

 
*womanizer*TM

— THE ORIGINAL —

DUO

MANUAL

ENGLISH

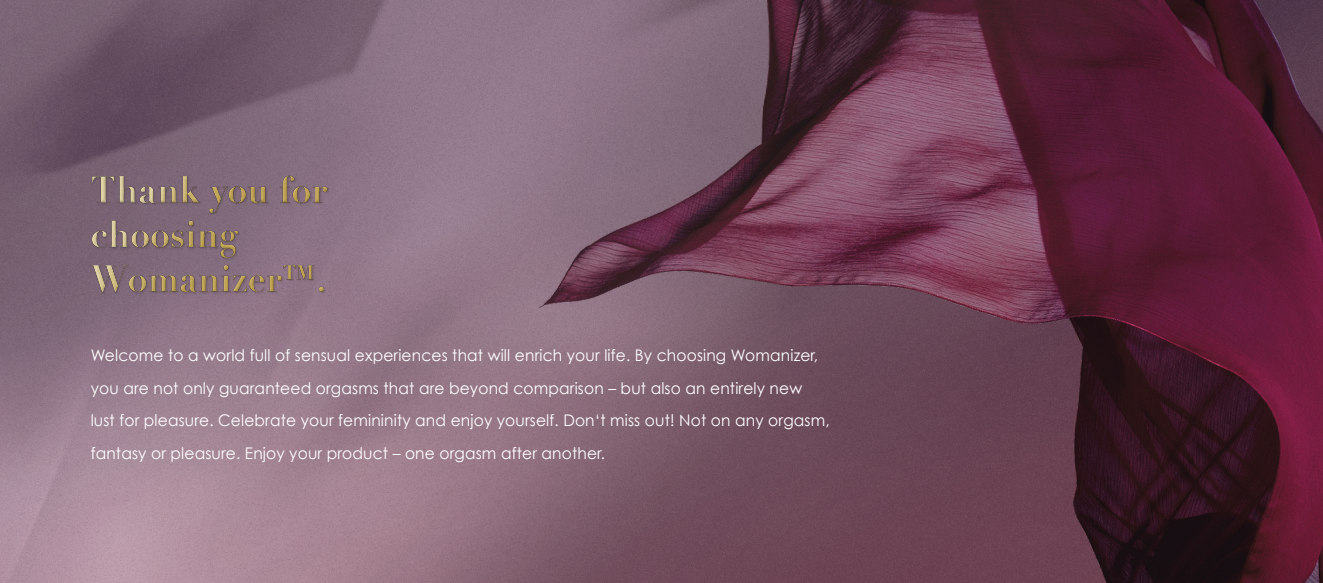

Thank you for choosing Womanizer™.

Welcome to a world full of sensual experiences that will enrich your life. By choosing Womanizer, you are not only guaranteed orgasms that are beyond comparison – but also an entirely new lust for pleasure. Celebrate your femininity and enjoy yourself. Don't miss out! Not on any orgasm, fantasy or pleasure. Enjoy your product – one orgasm after another.



PLEASURE AIR™
TECHNOLOGY



SMART
SILENCE™



10 G-SPOT
VIBRATION PATTERNS



12 intensity levels for external stimulation



12 intensity levels for internal stimulation



Waterproof



Two silicone stimulation heads



Standby mode



Easy to clean

DESCRIPTION

CHARGING

QUICK GUIDE

USE

TIPS

 
CLEANING

GENERAL INFORMATION

Note: Please read these instructions carefully before your first experience with Womanizer™, and keep them for reference.

DESCRIPTION

- A** On/Off Button
- B** Magnetic Charging Pins
- C+** Intensity Button for Clitoral Stimulation (Increase)
- C-** Intensity Button for Clitoral Stimulation (Decrease)
- D+** Intensity Button for Vibrator (Increase)
- D-** Intensity Button for Vibrator (Decrease)
- D-** Exit Button
- E** Vibration Pattern
- F** Stimulator Head
- G** Vibrator
- H** Charger (Optional)
- I** USB Charge Cable with Charging Head

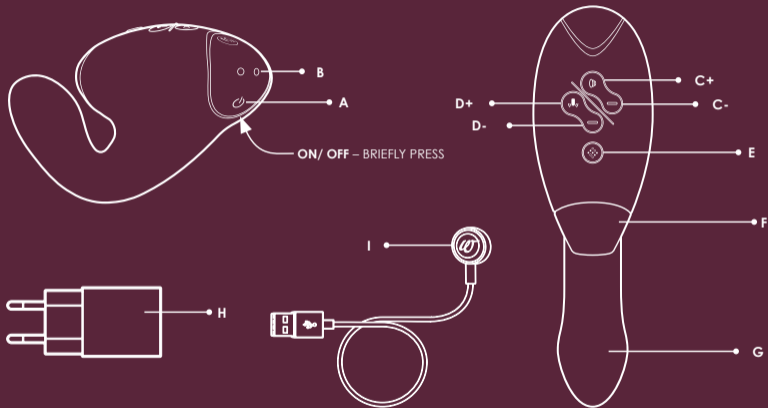


CHARGING

WARNING:

To ensure you experience pleasure from your Womanizer, please make note of the following:

- Before first use of the charging device, check the local voltage level, since the local mains voltage may not exceed the maximum mains voltage given on the device.
- Never immerse the charging device or charging cable in water or other fluids.
- Do not rinse the charging device and charging cable in running water.
- Check the stimulation device regularly for any damage.
- Do not use the device if one of the components is damaged.

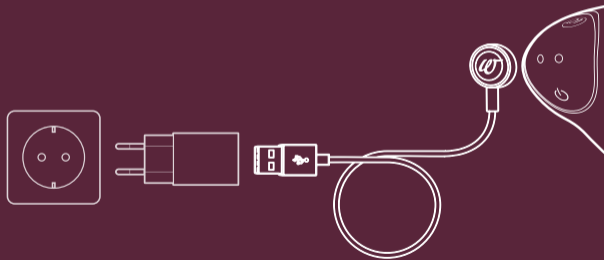

CHARGING

Please note:

We recommend that you fully charge your Womanizer™ before your first use. When you receive your Womanizer, the rechargeable battery is pre-charged for a short period of use and may have discharged fully due to environmental influences.

The charging process takes about two hours. Your Womanizer may become warm during charging, this is normal. After charging, you can experience up to 240 minutes of pleasure with your Womanizer. The duration of the operating time depends on how intensely you enjoy the Womanizer.



CHARGING

CHARGING STATUS DISPLAY

Your Womanizer™ has an LED located under the stimulation head. It serves two purposes: it indicates that your Womanizer is on, and also acts as a charging status indicator when you are charging your Womanizer.


A white LED lights up as soon as you switch on the Womanizer with the on/off button (A).

Your device immediately goes to standby mode when it is switched on. You can tell that your Womanizer is switched on by the white light on the stimulation head (F).

Please take the following steps if you wish to charge the rechargeable battery in your Womanizer:

1. Make sure that your Womanizer and the charging cable is dry.
2. Connect the USB charging cable (I) to a suitable USB connection (such as an adapter or PC, or similar).
3. Place the charging head (I) on the magnetic pins (B).
4. Despite the magnetic attraction of the pins, make sure that the charging head (I) is optimally positioned on the device, and your Womanizer is in a secure position for charging)
5. The white LED flashes when your Womanizer is charging.
6. When your Womanizer is fully charged, the white LED stops flashing and remains on, and you can remove the charging cable (I).

QUICK GUIDE

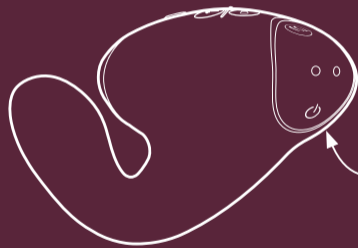

1. **ON** – BRIEFLY PRESS



2.



3.



4.

USE

NOTE: Before using your Womanizer please remove any body piercings or jewellery that may be close in proximity to Womanizer.

1. Press button (A) to switch on the Womanizer.
2. Your device is in standby mode when it is switched on. You can tell that your Womanizer is switched on by the white light on the stimulation head (F).
3. With Smart Silence™ your Womanizer is only active when you actually place it on your clitoris. Only then does the dual stimulation start, at the first intensity level (external stimulation of your clitoris and internal stimulation of your G-spot at the same time). This not only makes it more discreet to use, but also makes it more pleasant for you to enjoy. Please make sure that you aren't touching the stimulation head when you switch on your Womanizer, as otherwise the Smart Silence™ function cannot be ensured.
4. First insert the vibrator.
5. Spread your labia slightly with your fingers to reveal your clitoris.
6. Now you can press the stimulation head (F) against your clitoris with light pressure, so that it is covered by the oval opening of the stimulation head.
7. As soon as the stimulation head is perfectly positioned on your clitoris, the fun can begin – and the moment is totally yours. Experience it as you wish: if you want more intensity, press button (C+) and the intensity will increase by one level. You can do that eleven more times until you reach the highest intensity level. Each time the level is changed, the LED on the stimulation head lights up. Once you've reached the maximum level, the LED does not change.

USE

8. To reduce the intensity, press button (C-). Each time you press the button, the intensity decreases by one level. The LED lights up each time the level is changed.
9. For more vaginal vibration intensity, press button (D+). The intensity increases by one level. After you have pressed the button eleven times, you have reached the highest intensity level.
10. To reduce the vibration intensity, press button (D-). Each time you press the button, the intensity decreases by one level. The LED lights up each time the level is changed.
11. You can close your thighs to hold your Womanizer in the desired position. You can also simply hold the device in your hand.
12. When you are finished using your Womanizer, simply switch the device off by pressing button A.
13. If you want to use Womanizer again shortly after, you can hold down the exit button (D-) for two seconds instead. All of the functions switch to standby mode. You can activate your desired functions by simply pressing the relevant button (C+) or (C-).

USE



IMPORTANT INFORMATION:

Womanizer recommends using a water-based lube with your product. Please do not use perfumed or alcohol-based lube gels or massage oils in order to avoid damage. Silicone-based lube gels are not recommended.



A SMALL TIP:

Womanizer comes with two stimulation heads. Switch between the two stimulations heads (S and M) to create an optimal fit for you.

TIPS

DISCOVER NEW EXCITING SIDES TO YOUR WOMANIZER!



G-SPOT VIBRATION: What kind of pleasure are you in the mood for today – intense, tender, powerful, gentle? The clitoral stimulator and the vibrator both have 12 intensity levels to choose from. That alone provides tantalising interplay. But there's more: the vibrator also has ten additional stimulation patterns so you can always find the right pleasure combination for you. These patterns will tease your G-spot to ever new surprising and harmonic heights of pleasure. Adjust the different levels and patterns using the intuitive buttons to get exactly what you need in that moment.




STANDBY MODE: The standby mode is designed to make handling your Womanizer especially battery-friendly and convenient: the device automatically switches off after ten minutes of disuse. If the battery of your Womanizer is too low, the device automatically switches off after five minutes of disuse.



SMART SILENCE™: Your Womanizer Duo features innovative Smart Silence™ technology. It ensures that your sensual companion only starts the tantalising interplay of clitoral stimulation and vibration once the stimulation head comes into contact with your skin. Until contact the Duo remains in standby mode, which you can see by the light on the head. If the stimulation head is removed from your body and placed to one side – because you want to concentrate on your partner, for example – the Duo goes back to standby mode. So you can use the Duo or put it to one side at any time, without having to press buttons or worry about annoying vibration sounds.

To deactivate the Smart Silence™ function, hold down the two buttons (C+) and (C-) at the same time for approx. two seconds. You can tell that the function has been deactivated when your Womanizer is constantly active – not just when it touches your skin.

CLEANING

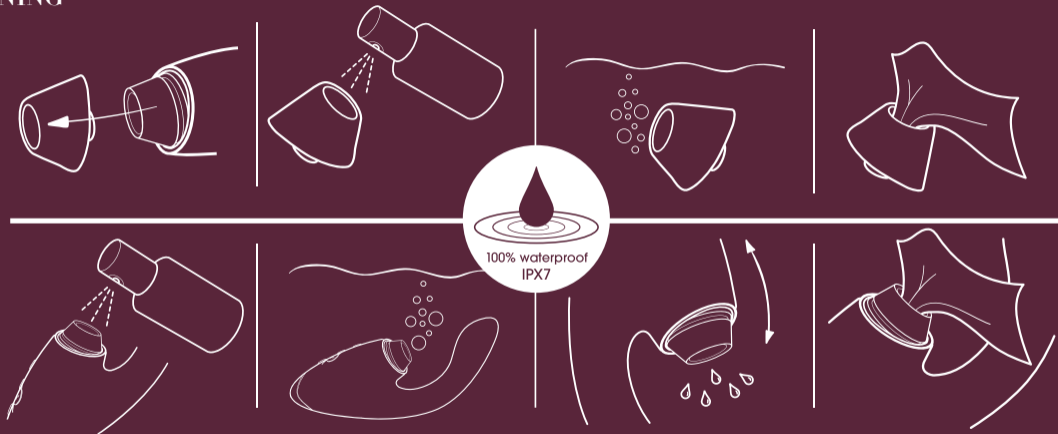

CLEANING

HOW TO CLEAN YOUR WOMANIZER



Your Womanizer is 100 % waterproof and is easy to clean. For ideal cleaning, we recommend that you use a sex toy cleaner.

PLEASE NOTE: When changing the stimulation heads or cleaning the Womanizer head, we recommend that you switch off the Womanizer.

CLEANING YOUR WOMANIZER IN TEN EASY STEPS:

1. Make sure that the charging cable has been disconnected.
2. Remove the stimulation head from the device.
3. Clean the stimulation head in hot water and treat it with a sex toy cleaner.
4. Put the sex toy cleaner into the pressure chamber and let it take effect.
5. Switch the Womanizer to the highest level and immerse it into warm water for one minute.
6. Shake off your Womanizer freeing it of water
7. Keep your Womanizer switched on until the noise caused by contact with the water is no longer heard.
8. Now switch off the Womanizer and dry it with a cloth.
9. You can also clean the compression chamber with a cotton swab and sex toy cleaner.
10. Finally, reapply the stimulation head – and you're done.

GENERAL INFORMATION

USE

Thoroughly clean your Womanizer before first-time use, after each usage, and when using in another body area in order to reduce the risk of infection (see section "How to clean your Womanizer").

STORAGE

Place the cleaned Womanizer back in the storage box. Store in a secure, dry place without exposure to direct sunlight.

TECHNICAL DATA

Model:	DUO	
Charger:	Input:	100–240 V ~ 50/60 Hz
	Output:	5 V --- 1 A



GENERAL INFORMATION

WARNING



For perfect use of the product, please note the following:

- Keep the product away from children, especially small children.
- Always clean the product according to the instructions given here.
- Do not expose the product or the charging device to direct sunlight or UV light for a longer period of time.
- Avoid high temperatures.
- Never immerse the cable in water or other fluids, and never rinse it under running water.
- Do not charge the product when one of the components is damaged.

If you wish to use the product under any of the circumstances below, please consult your doctor:

- During pregnancy or shortly after giving birth
- Skin irritations / skin diseases
- Other health problems
- If you have physical allergic reactions to the material

Please also note the following in order to use the product safely:

- Never use the product for longer than 15 minutes on any one area.
- Do not use the product if you have a pacemaker.
- Only use the product for the intended purpose, for clitoral and G-spot stimulation.
- Stop use immediately if you experience pain or discomfort.

GENERAL INFORMATION

RECHARGEABLE BATTERY

The device has an integrated lithium-ion rechargeable battery. The rechargeable battery may not be burnt, dismantled or exposed to temperatures above 60 °C. If overheated, the rechargeable battery, and therefore also the device, may be damaged. This device is only suitable for users with restricted physical, sensory or psychological abilities, or without any experience or previous knowledge, when appropriate supervision or detailed instruction on the use of the device is provided by a responsible person. Ensure that children do not play with the device. If you notice an unusual noise, switch off the stimulation device immediately and refrain from further use.

ENVIRONMENTAL PROTECTION (note on batteries and waste electronic devices)

As a distributor of electronic devices, we are legally obliged to accept the return of waste electrical and electronic devices free of charge. We expressly state that you as the user are legally obliged to return used batteries.

Never throw away electronic devices or batteries in the household waste. The symbol shown below, which is also attached to our electronic items, is intended to expressly remind you of this.



For further information, in particular with regard to returning batteries and electronic devices, see the "Terms and Conditions" section of our website.

GENERAL INFORMATION

FULFILMENT OF STANDARDS

This device fulfills all standards relating to electromagnetic compatibility (EMC).

The device is safe to use as long as it is used correctly and in accordance with the instructions given in this user manual.



ATHENA'S

H O M E N O V E L T I E S