

Disco Stick

Operating Instructions



SKU 2791

Come and take a ride on the DISCO STICK! This powerful waterproof toy provides illumination and stimulation! Orgasms await on either side of this incredible multi-speed pleasure stick! The shaft of this toy is non-phallic, smooth and sleek. One side of the tip is contoured with a scoop that provides unbelievably intense clit cupping! The other side features a protruding pleasure nub that acts more like a gyrator than a vibrator! The LED light bathes your erogenous zones in soft light that grows brighter as you turn it up. The Disco Stick is nonporous, safe for the body and made using phthalate free, non-toxic ABS plastic. Turn off the lights! Turn on the vibrations! Enjoy the light show!

- 1 year warranty
- Transparent, durable ABS plastic
- Insertable length: 5.5 inches long by 1.1 inches wide
- Length: 7.5 inches
- Batteries: 2 AA (not included)
- Waterproof
- Provides G-spot stimulation
- Phthalate free



Operating



Follow the arrow to increase speed and light. Reverse to reduce speed and return to OFF.

Remove batteries when not in use and store separately.

Cleaning and storage

Clean before and after every use. Dry completely. For best results we recommend using Athena's (antibacterial) Mighty Tidy Toy Cleaner (SKU MTT-1235 4 oz. or SKU MTT-2762 8 oz.) Store in a cool dry location.

Lubrication

Be sure to use ample lubrication with your bedroom toys. For great results try Athena's Perfectly Pure Intimate Moisturizer (SKU 5701). You can find additional lubrication options on our web site or in our catalog.

To ensure that you always enjoy a pleasurable experience with your adult novelty items, follow the care instructions listed below:

Remove batteries when not in use and store separately.

Do not store products near extreme cold or heat. Store in a cool, dry location.

Store products separately as different materials may react with each other.

Take caution when placing lotion and massage oil bottles or adult novelties directly on furniture surfaces. Place them on a cloth to protect your toys and your furniture.

Caution: For adult use only as a non-medical pleasure device only. Discontinue use in the event of any medical condition or pain.

Warranty

All sales are final due to the intimate nature of our products. No cash refunds will be given.

Effective February 1, 2021, this motorized product is guaranteed for 1 year for a replacement of the exact item. If you purchased this item at a party and need a replacement, please contact your Goddess or Adonis directly. If you purchased this product on the Athena's website and need a replacement, call (877)-ATHENAS or email our Customer Care Liaison at customerservice@athenashn.com for instructions to send back your item. All defective product returns must be accompanied by a pre-authorization number.

If product arrives broken or breaks within 30 days, it's the client's responsibility to pay for the shipping of the broken item to Athena's, Athena's is responsible for the shipping of the replacement. If this item breaks after 30 days of receipt, it's the client's responsibility to pay for the shipping of the broken item to Athena's and the shipping for the replacement item.



© June 2021

Athena's Home Novelties, Inc.
Woonsocket RI 02895

www.athenashn.com
1-877-ATHENAS

Batteries

Twist cap at the base off from the toy. Be sure to follow the + and - signs when inserting batteries. The positive is inserted first and the next battery follows suit. Snap and twist the cover to close. Be sure the cap is securely in place.

