Euphoria Instructions



SKU3474

Experience Euphoria over and over again. Whether you are in need of some alone time or enjoying your partner's body, this one of a kind seamless silicone sex toy will bring knee-shaking pleasure. The ravishing, rotating shaft is covered in ribbed swirls and features 3 speeds for internal thrills. The tulip shaped external teaser has a unique tongue flicking in the center while the soft, flexible elongated tip caresses the area with 10 wild functions of vibration, pulsation, and escalation! Euphoria is waterproof for a satisfying underwater encounter in the hot tub, shower, or bubble bath! Three simple illuminated buttons are easy to use and find in the dark and the dueling motors can be used together or separately!

Features



Silicone with ABS plastic on handle Latex and Phthalate free Not for use with silicone lubricants Waterproof Provides G-spot stimulation

Internal Rotating Shaft

Cleaning

Always clean product before first use, and clean after every use. For best results we recommend using Athena's (anti-microbial) Mighty Tidy Toy Cleaner (SKU MTT-1235 4 oz. or SKU MTT-2762 8 oz.).

Lubrication

Be sure to use ample lubrication with your bedroom toys. For great results try Athena's Perfectly Pure Intimate Moisturizer (SKU 5701). You can find additional lubrication options on our web site or in our catalog.

To ensure that you always enjoy a pleasurable experience with your adult novelty items, follow the care instructions listed below:

Do not store products near extreme cold or heat. Store in a cool, dry location.

Store products separately as different materials may react with each other.

Take caution when placing lotion and massage oil bottles or adult novelties directly on furniture surfaces. Place them on a cloth to protect your toys and your furniture.

Caution: For adult use as a non-medical pleasure device only. Discontinue use in the event of any medical condition or pain.

Warranty

All sales are final due to the intimate nature of our products. No cash refunds will be given.

Effective February 1, 2021, this motorized product is guaranteed for 1 year for a replacement of the exact item. If you purchased this item at a party and need a replacement, please contact your Goddess or Adonis directly. If you purchased this product on the Athena's website and need a replacement, call (877)-ATHENAS or email our Customer Care Liaison at customerservice@athenashn.com for instructions to send back your item. All defective product returns must be accompanied by a pre-authorization number.

If product arrives broken or breaks within 30 days, it's the client's responsibility to pay for the shipping of the broken item to Athena's, Athena's is responsible for the shipping of the replacement. If this item breaks after 30 days of receipt, it's the client's responsibility to pay for the shipping of the broken item to Athena's and the shipping for the replacement item.



© June 2021 Athena's Home Novelties, Inc. Woonsocket RI 02895 1-877-ATHENAS


Charging

Charge upon opening. Insert input plug at the back toward the base and connect the USB output plug to the USB port of your computer or other power source and the other end to the toy's input.

LED light will flash while charging and glow solid when fully charged. Fully charge product before use. Battery life depends on frequency and speed of use. We recommend fully charging your product once every 6 months.



Operating

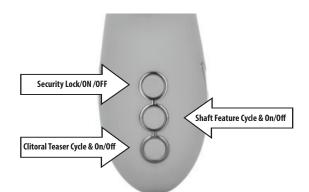

OPERATING INSTRUCTIONS:

- 1. This item comes with a security lock feature. To unlock product, press and hold the top button for 3 seconds, you will see the bottom 2 buttons momentarily illuminate.
- 2. To activate rotating shaft feature, press the middle button. Tap button for 2 additional function levels.
- 3. To turn off special shaft feature at any time, press and hold the middle button for 3 seconds.
- To activate vibrating functions in the clitoral teaser, press the bottom button once. Continue by tapping button until desired function is reached.
- 5. To turn off vibrations in the clitoral teaser at any time, press and hold the bottom button for 3 seconds.
- To turn off all special shaft and clitoral teaser features and vibrations in the stimulator at any time, press the top button once.
- 7. To relock product, press and hold the top button for 3 seconds. Ensure product is locked after each use to conserve battery life.
- 8. This item comes with a memory feature; item will resume on last function used.