

Expand Your Horizons Operating Instructions



SKU 3413

Expand your orgasmic horizons with a brand new sensation! This vivacious silicone vibe thrusts and expands in two awe-inspiring actions! The simultaneous motions are designed to move smoothly and steadily with tireless enthusiasm. Customize your desired lengths and widths using the locking feature. Expand your Horizons in the bath or shower! It's completely submersible!

Features :

- Rechargeable - charge conveniently with the USB cable included
- Initial charge 1 hour (3 hours for a complete charge)
- Run time: 1 hour on highest settings
- Run time: 1.5 on low settings
- Dual vibrator with thrust and expand action
- 8 different speeds and functions in both the shaft and external stimulator
- 5 thrusting and expanding speeds
- Program 5 custom lock lengths and widths
- Length: 9.25" (expands to 9.75")
- Insertable Length: 5.25" (expands to 5.75")
- Width: 1.36" (expands to 1.56")
- Shuts off automatically after 5 minutes of no use.
- Silicone with ABS plastic on handle
- Latex and Phthalate free
- Not for use with silicone lubricants
- Waterproof
- Provides G-spot stimulation

External Stimulator

Control Panel

Main Shaft

Expand Action

Thrust Action



Cleaning and storage

For best results, we recommend using Athena's (antibacterial) Mighty Tidy Toy Cleaner (SKU MTT-1235 4 oz. or SKU MTT-2762 8 oz.) before and after each use. Dry completely.

Lubrication

Be sure to use ample lubrication with your bedroom toys. For great results try Athena's Perfectly Pure Intimate Moisturizer (SKU 5701). You can find additional lubrication options on our web site or in our catalog. Safe to use with silicone or water based lubricants.

Follow these simple steps to help extend the life cycle of your items

Do not store products near extreme cold or heat.

Do not store your adult toys in a manner where they are touching. Keep them separated to avoid melting or discoloring.

Do not place lotion bottles or adult novelties directly on furniture surfaces.

Place toys on a cloth to protect your toys and the finish on your furniture. For Adult Use Only.

Caution: For adult use as a non-medical pleasure device only. Discontinue use in the event of any medical condition or pain.

Warranty

All sales are final due to the intimate nature of our products. No cash refunds will be given.

Effective February 1, 2021, this motorized product is guaranteed for 5 years for a replacement of the exact item. If you purchased this item at a party and need a replacement, please contact your Goddess or Adonis directly. If you purchased this product on the Athena's website and need a replacement, call (877)-ATHENAS or email our Customer Care Liaison at customerservice@athenashn.com for instructions to send back your item. All defective product returns must be accompanied by a pre-authorization number.

If product arrives broken or breaks within 30 days, it's the client's responsibility to pay for the shipping of the broken item to Athena's, Athena's is responsible for the shipping of the replacement. If this item breaks after 30 days of receipt, it's the client's responsibility to pay for the shipping of the broken item to Athena's and the shipping for the replacement item.



© June 2021

Athena's Home Novelties, Inc.
Woonsocket RI 02895

www.athenashn.com
1-877-ATHENAS

Charging




Charge upon opening. Insert input plug at the base and connect the USB output plug to the USB port of your computer or other power source and the other end to the toy's input.

The LED lights will blink when charging and become solid when fully charged (approximately 1 hour).

Initial charge 1 hour (3 hours for a complete charge)

Run time: 1 hour on highest settings

Run time: 1.5 on low settings.

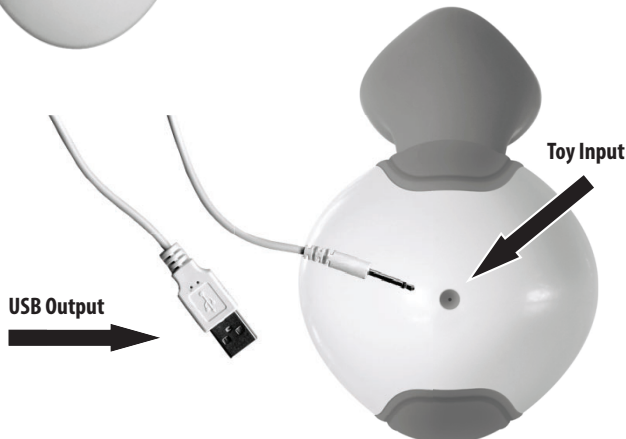

Control Panel




Vibration

Thrust Expand

Power / Customize

Thrust
Expand
Action

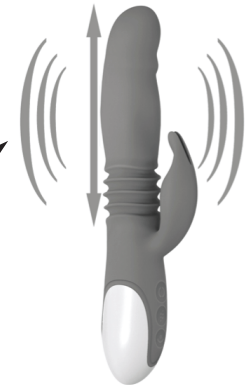

Operating:

Bottom (Power and Customize) Button: Turn On by pressing the power button for (3 seconds). The light will turn on. Tap again to customize length and width.

Middle (Thrust & Expand) Button: Press for (3 seconds) to turn on and tap to cycle through the 5 thrusting levels. To turn off press for (3 seconds).

Top (Vibration) Button: Press for (3 seconds) to turn on and tap to cycle through the 8 vibrations. To turn off press for (3 seconds).

To turn off completely, press and hold the Power Bottom Button for 3 seconds. Shuts off automatically after 5 minutes of no use.