

KeyStroke Operating Instructions



ATHENA'S
HOME NOVELTIES

SKU 3490

Hold the key to sophisticated pleasure in the palm of your hand. This 10 speed/function vibe handles like a dream thanks to a black chrome finished ring-shaped grip that gives you expert control. Its life-like sculpted head and hardworking bunny ears are controlled independently with two separate powerful motors. You'll feel the intensity inside and out as it radiates from within the creamy, smooth silicone shaft. LED lights illuminate the buttons to make it easy to find your ideal function. The KeyStroke is waterproof and submersible to unlock and fulfill your underwater fantasies.

Features :

- Rechargeable - USB magnetic charge cord included
- 2 Independent powerful motors
- Waterproof and completely submersible
- Provides G-spot stimulation
- Phthalate and Latex free
- Silicone and ABS plastic handle
- Total length: 8.75"
- Insertable length: 5"
- Width at widest point: 1.5"
- Complete charge: 120 minutes
- Run time high speed, both motors: 70 minutes
- Run time low speed, both motors: 90 minutes

**10 Speed/Function
Phallic Shaped
G-spot Stimulation**

Main Shaft

**10 Speed Bunny Ear
Clitoral Stimulator**

Easy Hold Ring Handle



Cleaning and storage

Clean before and after use. Dry completely. For best results we recommend using Athena's (antibacterial) Mighty Tidy Toy Cleaner (SKU MTT-1235 4 oz. or SKU MTT-2762 8 oz.) Store in a cool dry location.

Lubrication

Be sure to use ample lubrication with your bedroom toys. For great results try Athena's Perfectly Pure Intimate Moisturizer (SKU 5701). You can find additional lubrication options on our web site or in our catalog.

Follow these simple steps to help extend the life cycle of your items

Do not store products near extreme cold or heat. Do not store your adult toys in a manner where they are touching. Keep them separated to avoid melting or discoloring. Do not place lotion bottles or adult novelties directly on furniture surfaces. Place them on a cloth to protect your toys and the finish on your furniture.

Caution: For adult use as a non-medical pleasure device only. Discontinue use in the event of any medical condition or pain.

Warranty

All sales are final due to the intimate nature of our products. No cash refunds will be given.

Effective February 1, 2021, this motorized product is guaranteed for 5 years for a replacement of the exact item. If you purchased this item at a party and need a replacement, please contact your Goddess or Adonis directly. If you purchased this product on the Athena's website and need a replacement, call (877)-ATHENAS or email our Customer Care Liaison at customerservice@athenashn.com for instructions to send back your item.

All defective product returns must be accompanied by a pre-authorization number. If product arrives broken or breaks within 30 days, it's the client's responsibility to pay for the shipping of the broken item to Athena's, Athena's is responsible for the shipping of the replacement. If this item breaks after 30 days of receipt, it's the client's responsibility to pay for the shipping of the broken item to Athena's and the shipping for the replacement item.



ATHENA'S
HOME NOVELTIES

© June 2021

Athena's Home Novelties, Inc.
Woonsocket RI 02895
www.athenashn.com
1-877-ATHENAS

Charging

This vibrator arrives with a partial charge. Charge for about 30 min prior to first use. Connect the USB cable to the USB port of your computer or other power source and align the other end to the toys magnetic dots.


The light will flash when charging and remain solid when fully charged. Full charge takes about 120 minutes. There is no danger of over-charging, but we recommend not to charge for long periods of time.

Complete charge: 120 minutes
Run time high speed, both motors: 70 minutes
Run time low speed, both motors: 90 minutes



Control Panel

Illuminated Control Panel

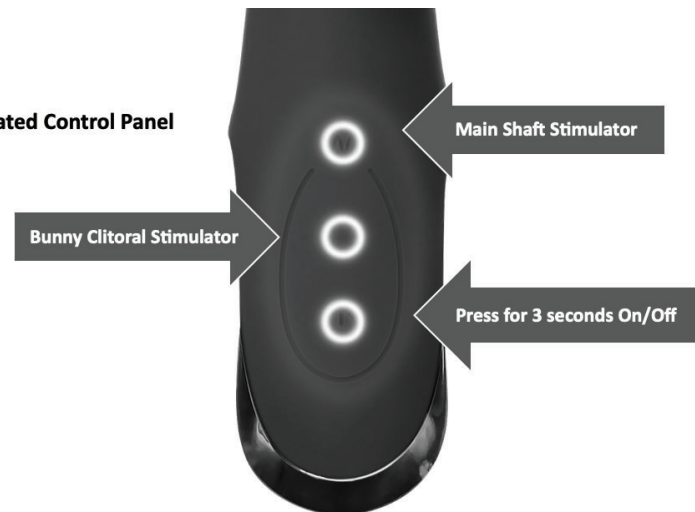

Operating: Press the On/Off power button (bottom) for 3 seconds to start. The 3 lights on the control panel will glow.

Tap the clitoral button (middle) to initiate the first of 10 clitoral patterns. Tap again to advance to additional increased vibrations.

To initiate the main shafts 10 speeds/functions, tap the button (top). Tap again to advance to additional increased speeds/vibrations.

Press the On/Off power button (bottom) for 3 seconds at any time to completely disengage and turn off.