

Magnetic Attraction Operating Instructions

SKU 3411



Adventurous couples will enjoy the sensuous thrill of this new erotic gadget! The extremely quiet and contoured vibe is made of silky silicone. The elevated arch is textured with ridges for added arousal. It slips into the panties and stays put thanks to the magnetic tabs on either side. The remote is small and easy to conceal in the palm of the hand! With 12 functions of vibration, escalation and pulsation to explore, Magnetic Attraction will up the ante in any relationship. Both remote and panty vibe are rechargeable! Whether playing at home or out in public, the 32' range will allow sensual space in your togetherness!

Features :

- Waterproof
- Not for use with silicone lubricants
- 100% Silicone
- Metallic details: ABS Plastic
- Phthalate free
- Toy can operate with or without remote
- Memory chip resumes on last function used
- Remote Range: 32 feet
- Rechargeable: USB double charge cord included
- Both toy and remote are rechargeable
- Product will automatically deactivate after 30 minutes of inactivity

Magnetic Attraction Toy:

- Length: 3.75 inches
- Shaft width: 1 inch

Magnetic Attraction remote: 3 inches

- Complete charge: 1 hour
- Run time high: 50 minutes
- Run time low: 70 minutes



Product will automatically deactivate after 30 minutes of inactivity. Memory chip resumes on last function used.

To use Magnetic Attraction with remote:

1. First turn on the Magnetic Attraction, press and hold down On/Off button for 3 seconds. The On light will glow. Magnetic Attraction must be turned on to activate remote.
2. Press metallic XO on the remote unit for 3 seconds, to activate the Magnetic Attraction modes. First press turns on first mode. Tap to increase or decrease buttons to cycle through intensity mode levels.
3. Press the XO on the remote for the intensity modes.
4. To turn Off press the XO on the remote for 3 seconds.
5. To completely disengage then turn Off the Magnetic Attraction button by pressing for 3 seconds.

To use Magnetic Attraction without remote:

1. First turn on the Magnetic Attraction, press and hold down On/Off button for 3 seconds. The On light will flash.
2. Press again to activate the intensity modes. Tap the On button repeatedly to cycle through intensity mode levels.
3. To turn Off press the button for 3 seconds.



Cleaning

Clean before and after every use. Dry completely. For best results we recommend using Athena's (antibacterial) Mighty Tidy Toy Cleaner (SKU MTT-1235 4 oz. or SKU MTT-2762 8 oz.) Store in a cool dry location.

Lubrication

Be sure to use ample lubrication with your bedroom toys. For great results try Athena's Perfectly Pure Intimate Moisturizer (SKU 5701). You can find additional lubrication options on our web site or in our catalog.

To ensure that you always enjoy a pleasurable experience with your adult novelty items, follow the care instructions listed below:

Do not store products near extreme cold or heat. Store in a cool, dry location. Store products separately as different materials may react with each other. Take caution when placing lotion and massage oil bottles or adult novelties directly on furniture surfaces. Place them on a cloth to protect your toys and your furniture.



Warranty

All sales are final due to the intimate nature of our products. No cash refunds will be given.

Effective February 1, 2021, this motorized product is guaranteed for 1 year for a replacement of the exact item. If you purchased this item at a party and need a replacement, please contact your Goddess or Adonis directly. If you purchased this product on the Athena's website and need a replacement, call (877)-ATHENAS or email our Customer Care Liaison at customerservice@athenashn.com for instructions to send back your item. All defective product returns must be accompanied by a pre-authorization number.

If product arrives broken or breaks within 30 days, it's the client's responsibility to pay for the shipping of the broken item to Athena's, Athena's is responsible for the shipping of the replacement. If this item breaks after 30 days of receipt, it's the client's responsibility to pay for the shipping of the broken item to Athena's and the shipping for the replacement item.

Caution

For adult use as a non-medical pleasure device only. Discontinue use in the event of any medical condition or pain.

www.athenashn.com

©June 2021 Athena's Home Novelties, Inc.
Woonsocket, RI 02895 1-877-ATHENAS

Charging and Run Time Information:

Fully charge before use. Use double prong charger and insert each prong into both Oval remote and Magnetic Attraction. Insert USB charger into any convenient USB port. When plugged in for charging lights will flash red and appear steady when charge is complete. We recommend charging every six months to extend product life.

Complete charge: 1 hour, Run time high: 50 minutes, Run time low: 70 minutes

