

# Mimosa Operating Instructions



SKU 3428


Indulge in sweet, sensuous waves of pleasure as the Mimosa flickers against your most sensual spots. This vibrant orange mini massager gives you full control over the 10 super-charged functions including a Power Boost. The plush silicone and flexible flickering tip boast rows of ridges to pop the cork of pleasure. Get your juices flowing in the morning or wind down after a long day with a Mimosa in the tub! It's waterproof. USB charging cable included.

## Features :

- USB Rechargeable (cord included) with self-sealing charging port.
- Silicone with ABS Plastic metallic detail
- Not for use with silicone lubricants
- Power boost for maximum vibration
- Memory chip resumes on last function used
- Security travel lock
- Phthalate free
- Waterproof
- Whisper quiet

Length: 3.25 inches  
Width: 1.5 inches

Charge time: 2.5 hours  
Run time high speeds: 40 minutes  
Run time low speeds: 1.5 hours

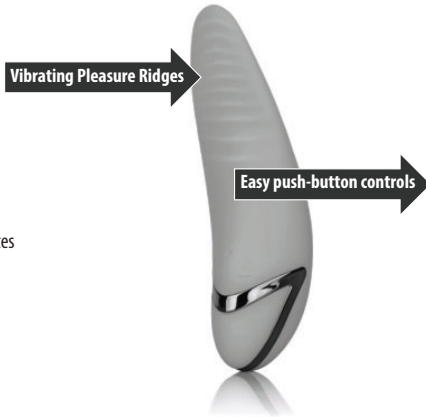


## Operating

**Security Lock:** Press the power button (top) for 3 seconds to disengage the security lock. Press for 3 seconds for OFF and to engage the security lock. The button will glow when ON. Memory Chip will resume last function used.

**Vibration and Pulsation:** Tap the (middle) button to turn on and cycle through the other 9 functions. Hold button down for 3 seconds to turn off functions.

**Power Boost:** Tap the (bottom) button to initiate the power boost. Tap to turn off.

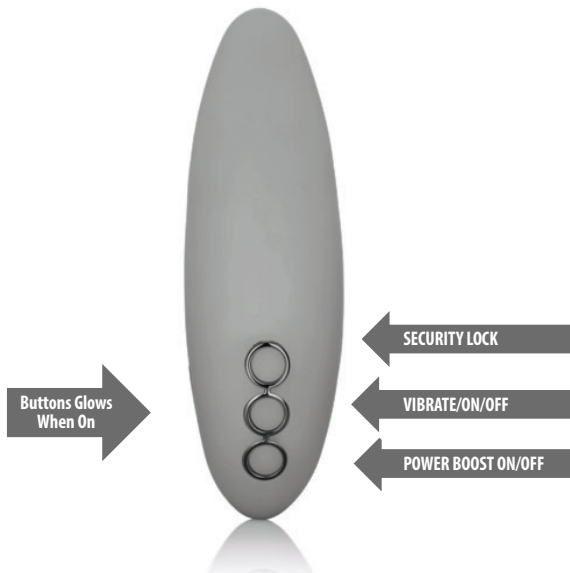

## Cleaning and storage

Clean before and after use. Dry completely. For best results we recommend using Athena's (antibacterial) Mighty Tidy Toy Cleaner (SKU MTT-1235 4 oz. or SKU MTT-2762 8 oz.)  
Store in a cool dry location.

## Lubrication

Be sure to use ample lubrication with your bedroom toys. For great results try Athena's Perfectly Pure Intimate Moisturizer (SKU 5701). You can find additional lubrication options on our web site or in our catalog. Do not use this vibe with silicone lubricants.

## Follow these simple steps to help extend the life cycle of your items

Do not store products near extreme cold or heat.

Do not store your adult toys in a manner where they are touching. Keep them separated to avoid melting or discoloring.

Do not place lotion bottles or adult novelties directly on furniture surfaces. Place them on a cloth to protect your toys and the finish on your furniture.

## Warranty

All sales are final due to the intimate nature of our products. No cash refunds will be given.

Effective February 1, 2021, this motorized product is guaranteed for 1 year for a replacement of the exact item. If you purchased this item at a party and need a replacement, please contact your Goddess or Adonis directly. If you purchased this product on the Athena's website and need a replacement, call (877)-ATHENAS or email our Customer Care Liaison at customerservice@athenashn.com for instructions to send back your item. All defective product returns must be accompanied by a pre-authorization number.

If product arrives broken or breaks within 30 days, it's the client's responsibility to pay for the shipping of the broken item to Athena's, Athena's is responsible for the shipping of the replacement. If this item breaks after 30 days of receipt, it's the client's responsibility to pay for the shipping of the broken item to Athena's and the shipping for the replacement item.

[www.athenashn.com](http://www.athenashn.com)

June©2021 Athena's Home Novelties, Inc.  
Woonsocket, RI 02895 1-877-ATHENAS



## Charging

Charge fully prior to first use. Connect the USB cable to the USB port of your computer or other power source and connect the other end to the toys charging port.

LED light will flash while charging and glow solid when fully charged. Battery life depends on frequency and speed of use. We recommend fully charging your product once every 6 months.

Self-sealing charging port for waterproof play integrity.

Rechargeable: USB charge cord included

Complete charge: 2 hours

Run time high speed: 1.5 hours

Run time low speed: 2 hours

