Poetry in Motion Operating Instructions



SKU 3491

This incredibly unique "wave function" love toy is truly Poetry in Motion! Made of body-safe silicone for maximum sexual wellness, the shaft produces a distinctive rhythmic dance inside the body allowing the user to explore a totally new experience. The powerful shaft motor sends sensuous ripples at three adjustable speeds. Externally, a flexible, flickering teaser ensures a full-coverage experience, providing 10 functions of independent vibration, pulsation, and escalation. Poetry in Motion is waterproof allowing solo users and couples and lose themselves in the language of love on land or in a body of water! This soft as a rose petal vibe comes with a state-of-the-art memory chip that will resume your favorite last-used setting upon powering up. A three-second-press travel lock ensures that the fun never starts without you.

Features: · Rechargeable - USB cord included **Rippling Waves** • State-of-the-art memory chip resumes on last Internal Shaft Waterproof • Security travel lock feature 10 Function • Provides G-spot stimulation • Phthalate and Latex free **Flickering External Clitoral Teaser** Silicone with ABS plastic trim • Total length: 8.25' • Insertable length: 4.75" • Width: 1.5" • Dual-action massager with clitoral flickering teaser • 3 speeds of independent shaft rippling waves • 10 functions of independent vibration, pulsation and escalation in the teaser **Control Panel**

Charging

Charge upon opening. Insert input plug at the back toward the base and connect the USB output plug to the USB port of your computer or other power source and the other end to the toy's input.

LED light will flash while charging and glow solid when fully charged. Fully charge product before use. Battery life depends on frequency and speed of use. We recommend fully charging your product once every 6 months.

Complete charge time: 2.5 hours Run time on high: .70 hour Run time on low: 2.5 hours



eaning

Always clean product before every use, and clean after every use. For best results we recommend using Athena's (anti-microbial) Mighty Tidy Toy Cleaner (SKU MTT-1235 4 oz. or SKU MTT-2762 8 oz.)

Lubrication

Be sure to use ample lubrication with your bedroom toys. For great results try Athena's Perfectly Pure Intimate Moisturizer SKU 5701. Not for use with silicone lubricants.

To ensure that you always enjoy a pleasurable experience with your adult novelty items, follow the care instructions listed below:

Do not store products near extreme cold or heat. Store in a cool, dry location.

Store products separately as different materials may react with each other.

Take caution when placing lotion and massage oil bottles or adult novelties directly on furniture surfaces. Place them on a cloth to protect your toys and your furniture.

Caution: For adult use as a non-medical pleasure device only. Discontinue use in the event of any medical condition or pain.

Warranty

All sales are final due to the intimate nature of our products. No cash refunds will be given.


Effective February 1, 2021, this motorized product is guaranteed for 1 year for a replacement of the exact item. If you purchased this item at a party and need a replacement, please contact your Goddess or Adonis directly. If you purchased this product on the Athena's website and need a replacement, call (877)-ATHENAS or email our Customer Care Liaison at customerservice@athenashn.com for instructions to send back your item. All defective product returns must be accompanied by a pre-authorization number.

If product arrives broken or breaks within 30 days, it's the client's responsibility to pay for the shipping of the broken item to Athena's, Athena's is responsible for the shipping of the replacement. If this item breaks after 30 days of receipt, it's the client's responsibility to pay for the shipping of the broken item to Athena's and the shipping for the replacement item.



© July 2021 Athena's Home Novelties, Inc. Woonsocket RI 02895 www.athenashn.com 1-877-ATHENAS

Control Panel

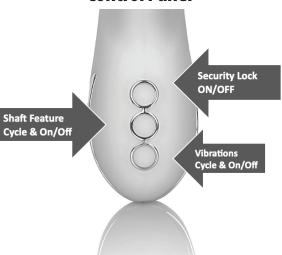

Operating:

- 1. This item comes with a security lock feature. To unlock product, press and hold the top button for 3 seconds.
- 2. To activate special shaft feature, press the middle button. Tap the button until desired function is reached.
- 3. To turn off special shaft feature at any time, press and hold the middle button for 3 seconds.
- 4. To activate vibrating functions in the stimulator, press the bottom button once. Tap the button until desired function is reached.
- 5. To turn off vibrations in the stimulator at any time, press and hold the bottom button for 3 seconds.
- 6. To turn off all special shaft features and vibrations in the stimulator at any time, press the top button once.
- 7. To relock product, repeat step 1. Ensure product is locked after each use to conserve battery life.