

# The Flirt Instructions

SKU 3480



This extraordinary new vibe places maximum sexual pleasure in the palm of your hand. Made of deep blue, high-quality, body-safe silicone, The Flirt is a sturdy wand-style sex toy. It is topped with an angled, flexible clitoral encaser that contains a flickering teaser within. 10 options of orgasmic speeds of vibration await. Using the single button controller, choose your level of powerful constant vibrations and intense flickering action. The Flirt's state-of-the-art technology includes dual motors, memory chip, and travel safety lock. Flirt with your partner between the sheets. Flirt with yourself in the shower.

## Features :

- 1 Year Warranty
- 10 functions of vibration and flickering sensation
- Phthalate free
- Waterproof
- Length: 6.25 inches
- Width: 1.5 inches
- Silicone, Trim ABS Plastic with metallic plating
- Not for use with silicone lubricants
- Rechargeable - charge conveniently with the USB cable included
- Charge time: 2.5 hours
- Run time: 80 minutes on the highest settings
- Run time: 120 minutes on the lowest settings
- State-of-the-art memory chip resumes on last function used
- Security travel lock feature



## Operating

Two dual motors.

Press and hold the power On/Off button for 3 seconds to activate dual motors' vibration and tongue tickler speeds. A small glow light will shine above the power button when ON. Tap to initiate the 9 additional speeds. Each tap will cycle to the next intensity level.

Press for 3 seconds to turn off. Security travel lock feature sets automatically when the vibe is turned off.

The state-of-the-art memory chip resumes on last function used when turned on again.



## Cleaning

Always clean product before every use, and clean after every use. For best results we recommend using Athena's (anti-microbial) Mighty Tidy Toy Cleaner (SKU MTT-1235 4 oz. or SKU MTT-2762 8 oz.).

## Lubrication

Be sure to use ample lubrication with your bedroom toys. For great results try Athena's Perfectly Pure Intimate Moisturizer SKU 5701. Not for use with silicone lubricants.

## To ensure that you always enjoy a pleasurable experience with your adult novelty items, follow the care instructions listed below:

Do not store products near extreme cold or heat. Store in a cool, dry location.

Store products separately as different materials may react with each other.

Take caution when placing lotion and massage oil bottles or adult novelties directly on furniture surfaces.

Place them on a cloth to protect your toys and your furniture.

## Caution: For adult use as a non-medical pleasure device only. Discontinue use in the event of any medical condition or pain.

## Warranty

All sales are final due to the intimate nature of our products. No cash refunds will be given.

Effective February 1, 2021, this motorized product is guaranteed for 1 year for a replacement of the exact item. If you purchased this item at a party and need a replacement, please contact your Goddess or Adonis directly. If you purchased this product on the Athena's website and need a replacement, call (877)-ATHENAS or email our Customer Care Liaison at customerservice@athenashn.com for instructions to send back your item. All defective product returns must be accompanied by a pre-authorization number.

If product arrives broken or breaks within 30 days, it's the client's responsibility to pay for the shipping of the broken item to Athena's, Athena's is responsible for the shipping of the replacement. If this item breaks after 30 days of receipt, it's the client's responsibility to pay for the shipping of the broken item to Athena's and the shipping for the replacement item.



©October 2021  
Athena's Home Novelties, Inc.  
Woonsocket RI 02895  
www.athenashn.com  
1-877-ATHENAS

## Charging



## Charging:

Fully charge product before first use. Insert input plug located on the opposite side to the operating buttons. Connect the USB output plug to the USB port of your computer or other power source and the other end to the toy's input.

Light will flash while charging and glow solid when fully charged.

Battery life depends on frequency and speed of use. We recommend fully charging your product once every 6 months.

Charge time: 2.5 hours

Run time low speed: 120 minutes

Run time high speed: 80 minutes