

# Private Party Instructions

SKU 3531



This Private Party includes 2 V.I.P.s - YOU AND YOUR LOVER! One of you wears the strategically curvy yet compact, silicone vibe in your undies. The other holds the optional wireless remote. Both of you enjoy private pleasures wherever your desires take you! Grocery shopping? Dinner and a movie? A concert? It's even waterproof for underwater play! The removable magnetic plate holds a garment firmly in place adhering to the vibe while you enjoy 10 powerful vibration settings ranging from mild to wild. Party for one? You can always use Private Party for hands-free enjoyment when you're flying solo!

## Features :

- 5 Year Warranty
- Toy: Total Length: 3.78", Width : 1.2"
- Remote: Length: 2.36", Width: 1.15"
- Toy is Waterproof and submersible
- Remote is Splashproof. NOT Waterproof
- Phthalate and latex free
- Toy: Silicone, Remote: ABS plastic
- Not for use with silicone lubricants
- Can be used with or without the remote
- Toy: Rechargeable USB charge cord included
- Wireless Remote Control included
- Remote battery: 1 CR2032 included
- Complete charge: 65 minutes
- Run time high speed: 50 minutes
- Run time low speed: 70 minutes

## Optional Remote 30 foot range



## Strategically Positioned Curves



Removable  
Magnetic plate  
adheres garment  
to vibe

Power Button

Magnetic Dots for Charging

## Cleaning and storage:

Clean before and after use. Dry completely. For best results we recommend using Athena's (antibacterial) Mighty Tidy Toy Cleaner (SKU MTT-1235 4 oz. or SKU MTT-2762 8 oz.)

## Lubrication:

Be sure to use ample lubrication with your bedroom toys. For great results try Athena's Perfectly Pure Intimate Moisturizer (SKU 5701). You can find additional lubrication options on our web site or in our catalog.

## Follow these simple steps to help extend the life cycle of your items:

Remove battery when not in use and store separately.

Do not store products near extreme cold or heat.

Do not store your adult toys in a manner where they are touching. Keep them separated to avoid melting or discoloring.

Do not place lotion bottles or adult novelties directly on furniture surfaces. Place them on a cloth to protect your toys and the finish on your furniture.

Store in a cool dry location.

## Caution :

For adult use as a non-medical pleasure device only. Discontinue use in the event of any medical condition or pain.

## Warranty:

All sales are final due to the intimate nature of our products. No cash refunds will be given.

This motorized product is guaranteed for 5 years for a replacement of the exact item. If you purchased this item at a party and need a replacement, please contact your Goddess or Adonis directly. If you purchased this product on the Athena's website and need a replacement, call (877)-ATHENAS or email our Customer Care Liaison at customerservice@athenashn.com for instructions to send back your item.

All defective product returns must be accompanied by a pre-authorization number.

If product arrives broken or breaks within 30 days, it's the client's responsibility to pay for the shipping of the broken item to Athena's, Athena's is responsible for the shipping of the replacement. If this item breaks after 30 days of receipt, it's the client's responsibility to pay for the shipping of the broken item to Athena's and the shipping for the replacement item.



ATHENA'S  
HOME NOVELTIES

©June 2022

Athena's Home Novelties, Inc.  
Woonsocket RI 02895

www.athenashn.com  
1-877-ATHENAS




## Replace remote battery

Slide battery compartment down as indicated by arrow.  
Remove old battery and slip new battery + side up into compartment.  
Slide cover back up into place.

## Charging

Indicator light will flash when charging and glow solid when complete.  
Connect to a USB power source.

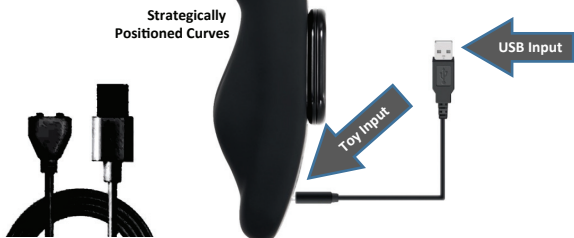

## Operating



- Remove Magnetic Plate
- Place Garment to Vibe
- Return plate to secure to vibe

Toy  
Power Button  
Standby  
On/Vibrate/Off

Remote  
Power Button  
On/Vibrate/Off



Toy charging. This vibrator arrives with a partial charge. Charge completely prior to first use. Connect the USB cable to the USB port of your computer or other power source and align the magnetic dots of the charge cord to the magnetic dots on the toy.

The light on the control panel will flash when charging and remain solid when fully charged. Full charges take about 65 minutes. There is no danger of over-charging, but we recommend not to charge for long periods of time. Battery life depends on frequency and speed of use. We recommend fully charging your product once every 6 months. Only use the cord supplied with this product or an Athena's authorized replacement cord.

Complete charge: 65 minutes  
Run time high speed: 50 minutes  
Run time low speed: 70 minutes

This toy must be turned on with the button directly on toy. Once toy is on, it can be operated with the same power button directly, or with the remote control.

**To operate toy directly without remote:** Turn the toy on by pressing the Power Button at the back of the toy for 3-4 seconds. The toy will illuminate and enter into standby mode. Tap the same Power Button to activate and cycle through the 10 speeds and functions of vibration. Turn the toy off by pressing the Power Button for 3-4 seconds. If left on standby, the toy will turn off automatically after 20 minutes.

**To operate with remote control:** Turn on the remote control by pressing the Power Button for 3-4 seconds. Then turn the toy on by pressing the Power Button at the back of the toy for 3-4 seconds, which puts it in standby. Once the toy motor is engaged and in standby, tap the Power Button on the remote to cycle through 10 speeds and functions of vibration. Turn the remote control off by pressing the Power Button for at least 3 seconds. This will place the toy in standby mode. If left on standby, the toy will turn off automatically after 20 minutes. Be sure to turn off the toy to completely disengage.