

Rosey Instructions

SKU 3532



Everything's coming up Rosey with this pretty pink dual action vibe! Soft as a rose petal, the platinum cured silicone shaft has a twirling tip! With 5 functions and 3 rows of beads, you'll experience optimal G-spot or P-Spot stimulation. The classic rabbit eared external stimulator is flexible and houses a powerful motor with 10 vibrating settings for choices galore. Rosey loves to get wet! It's fully submersible and waterproof for bath and shower play. The rose gold mirrored accents make Rosey an exquisite addition to your toy collection.

Features :

- 30-day warranty
- 2 Independent motors
- Waterproof and fully submersible
- Phthalate and Latex free
- Silicone and ABS plastic trim
- Not for use with silicone lubricants
- Provides G-spot stimulation
- Total length: 9.75 inches
- Insertable Length: 5.5 inches
- Width at widest point: 1.5 inches
- Rechargeable - USB charge cord included
- Complete charge: 150 minutes
- Run time high speed: 60 minutes

Shaft

**5 Functions. 3 Speeds. 2 Patterns.
3 rows of Rotating Beads.**

**Rabbit Stimulator
10 Vibration Functions.
4 Speeds. 6 Patterns.**

Control Panel



Cleaning and storage:

Clean before and after use. Dry completely. For best results we recommend using Athena's (antibacterial) Mighty Tidy Toy Cleaner (SKU MTT-1235 4 oz. or SKU MTT-2762 8 oz.)

Lubrication:

Be sure to use ample lubrication with your bedroom toys. For great results try Athena's Perfectly Pure Intimate Moisturizer (SKU 5701). You can find additional lubrication options on our web site or in our catalog.

Follow these simple steps to help extend the life cycle of your items:

Do not store products near extreme cold or heat.

Do not store your adult toys in a manner where they are touching. Keep them separated to avoid melting or discoloring.

Do not place lotion bottles or adult novelties directly on furniture surfaces. Place them on a cloth to protect your toys and the finish on your furniture.

Store in a cool dry location.

Caution :

For adult use as a non-medical pleasure device only. Discontinue use in the event of any medical condition or pain.

Warranty:

All sales are final due to the intimate nature of our products. No cash refunds will be given.

This motorized product is guaranteed for 30 days for a replacement of the exact item. If you purchased this item at a party and need a replacement, please contact your Goddess or Adonis directly. If you purchased this product on the Athena's website and need a replacement, call (877)-ATHENAS or email our Customer Care Liaison at customerservice@athenashn.com for instructions to send back your item.

All defective product returns must be accompanied by a pre-authorization number.

If product arrives broken or breaks within 30 days, it's the client's responsibility to pay for the shipping of the broken item to Athena's, Athena's is responsible for the shipping of the replacement. If this item breaks after 30 days of receipt, it's the client's responsibility to pay for the shipping of the broken item to Athena's and the shipping for the replacement item.




©June 2022

Athena's Home Novelties, Inc.
Woonsocket RI 02895

www.athenashn.com
1-877-ATHENAS

Charging

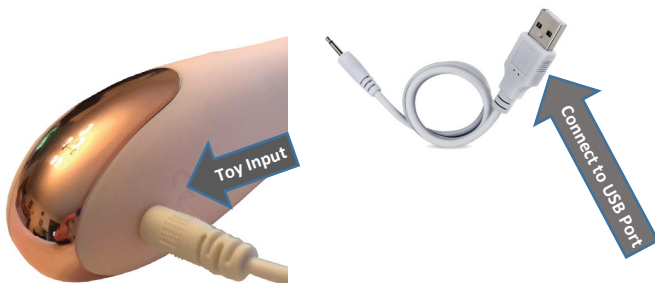


This vibrator arrives with a partial charge. Fully charge before first use. Connect the USB cable to the USB port of your computer or other power source and inset the input into the toy.

The small light above the control panel will flash when charging and remain solid when fully charged. Full charge takes about 150 minutes. There is no danger of over-charging, but we recommend not to charge for long periods of time. Battery life depends on frequency and speed of use. We recommend fully charging your product once every 6 months.

Rechargeable - USB charge cord included
Complete charge: 150 minutes
Run time high speed: 60 minutes

Operating

Control Panel

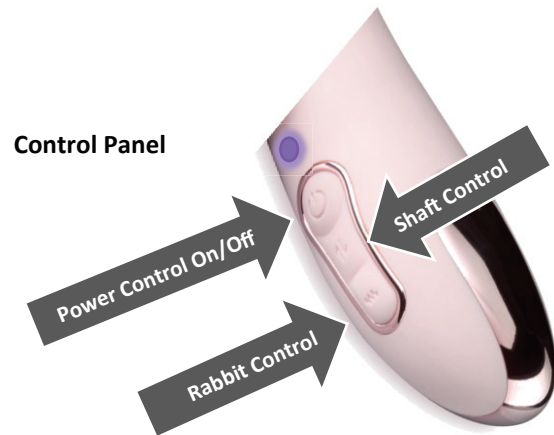

Control Panel: The two vibration control buttons are designed to be used independently. First, press the power button (top) for 3 seconds, it will activate and place on standby, and the small light above will glow.

Shaft Control Vibration: Tap the shaft control button (middle) to initiate the first mode. Continue to tap to cycle through the 4 additional modes. Press the shaft button (middle) for 3 seconds to stop.

Rabbit Control Vibrations: Tap the rabbit control button (bottom) to initiate the first mode. Continue to tap to cycle through the 9 additional modes. Press the shaft button (bottom) for 3 seconds to stop.

End All Functions: Press the power button (top) for 3 seconds, it will disengage both Shaft and Rabbit Controls, and the small light above will not glow.