

The Tipping Point Instructions



SKU 3533



This supercharged, flickering vibe will take you to the Tipping Point! Petite, discreet and coated in velvety soft, medical grade silicone, it doesn't even resemble a sex toy! The one touch button makes it easy to explore the 15 speeds. The contoured, firm yet flexible tip can bring powerful sensations to any erogenous zone! The pretty mirrored rose gold base adds a touch of elegance. Take the Tipping Point with you in the shower or bath for under water indulgence!

Features :

- 1 Year Warranty
- Waterproof and submersible toy
- Charging pad unit not waterproof
- Charging pad able to charge mobile devices (first, remove device from protective case)
- Phthalate and latex free
- Silicone with ABS plastic base
- Not for use with silicone lubricants
- Total length: 4.8 inches
- Width at widest point: 1.0 inch
- Rechargeable – Charging pad and USB charge cord included
- Complete charge: 2 hours
- Run time high speed: 40 minutes

Flexible flickering tip

15 Functions of vibration
One-touch Control



Cleaning and storage:

Clean before and after use. Dry completely. For best results we recommend using Athena's (antibacterial) Mighty Tidy Toy Cleaner (SKU MTT-1235 4 oz. or SKU MTT-2762 8 oz.)

Lubrication:

Be sure to use ample lubrication with your bedroom toys. For great results try Athena's Perfectly Pure Intimate Moisturizer (SKU 5701). You can find additional lubrication options on our web site or in our catalog.

Follow these simple steps to help extend the life cycle of your items:

Do not store products near extreme cold or heat.

Do not store your adult toys in a manner where they are touching. Keep them separated to avoid melting or discoloring.

Do not place lotion bottles or adult novelties directly on furniture surfaces. Place them on a cloth to protect your toys and the finish on your furniture.

Store in a cool dry location.

Caution :

For adult use as a non-medical pleasure device only. Discontinue use in the event of any medical condition or pain.

Warranty:

All sales are final due to the intimate nature of our products. No cash refunds will be given.

This motorized product is guaranteed for 1 year for a replacement of the exact item. If you purchased this item at a party and need a replacement, please contact your Goddess or Adonis directly. If you purchased this product on the Athena's website and need a replacement, call (877)-ATHENAS or email our Customer Care Liaison at customerservice@athenashn.com for instructions to send back your item.

All defective product returns must be accompanied by a pre-authorization number.

If product arrives broken or breaks within 30 days, it's the client's responsibility to pay for the shipping of the broken item to Athena's, Athena's is responsible for the shipping of the replacement. If this item breaks after 30 days of receipt, it's the client's responsibility to pay for the shipping of the broken item to Athena's and the shipping of the replacement item.



©July 2022

Athena's Home Novelties, Inc.
Woonsocket RI 02895

www.athenashn.com
1-877-ATHENAS

Charging

Indicator light will flash when charging and grow solid when complete



Charging Pad can charge mobile devices. Be sure to remove protective, decorative cases before charging.

This vibrator arrives with a partial charge. Fully charge before first use. Connect the USB cable to the USB port of your computer or other power source and insert the plug of the charge cord into pad. Place the toy on the center of the charging pad.

The light on the toy will flash when charging and remain solid when fully charged. Full charge takes about 2 hours. We recommend not to charge for more than 3 hours. Battery life depends on frequency and speed of use. We recommend fully charging your product once every 6 months. Only use the cord and pad supplied with this product or an Athena's authorized replacement pad and cord.

Rechargeable – Charging pad and USB charge cord included
Complete charge: 2 hours
Run time high speed: 40 minutes

Operating



Power Button
On/Vibrate/Off

One-touch Control: Press and hold the power button located on the side for 3 seconds to turn the vibrator on. Vibrator will be on as indicated by a light.

Tap the On/Vibrate/Off power button to initiate the 15 functions. Each tap will cycle to the next vibration level of intensity.

Press and hold the power button for 3 seconds to turn the vibrator off.